


STEP BY STEP INSTRUCTIONS FOR INSTALLING YOUR WOODEN DECKING

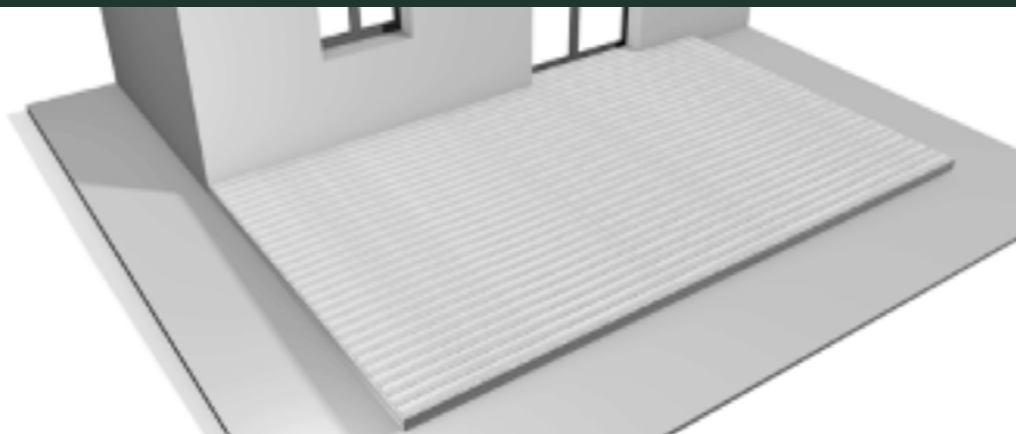

Components

JOISTS



Alu joist



Decking riser

RECOMMENDED FOR INSTALLATION ON A STABILISED SURFACE (WITHOUT DECKING RISERS)



Elastomer band

OPTIONAL: FOR FINISHING




Top Cube





B1, B2 or B3

Preparation

1. | TOOLS

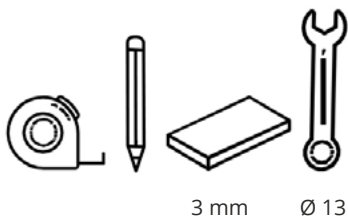


T 30

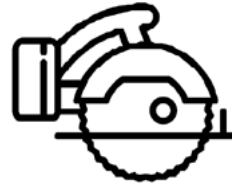



Saw blade for aluminium
with a negative tooth angle

2. | PREPARE THE FINISHING PLANKS (WITH THE TOP CUBE)

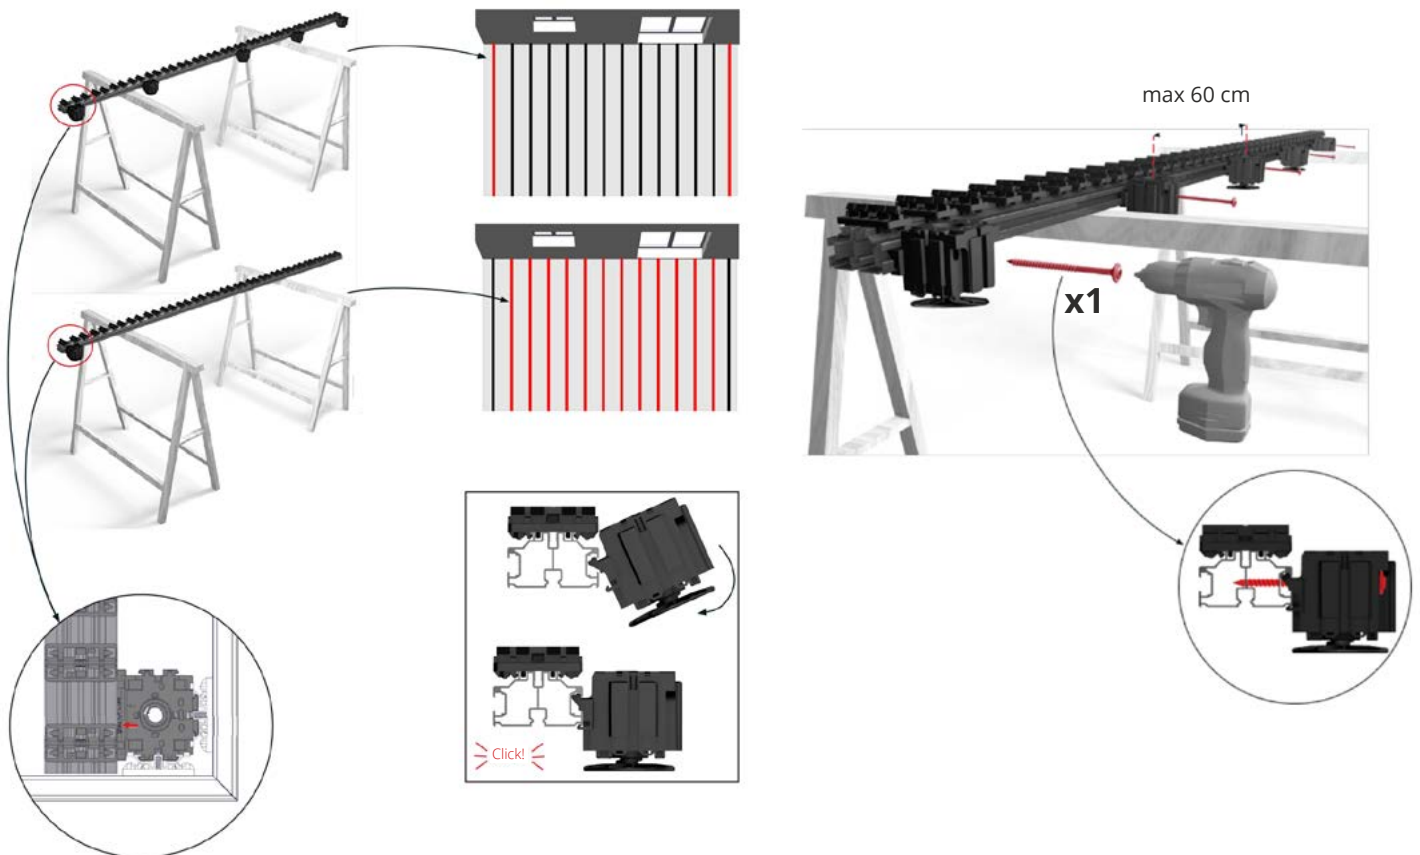


If there are no finishing planks, you do not need a TOP CUBE > proceed to step 3

3. | PLACE THE DECKING RISERS

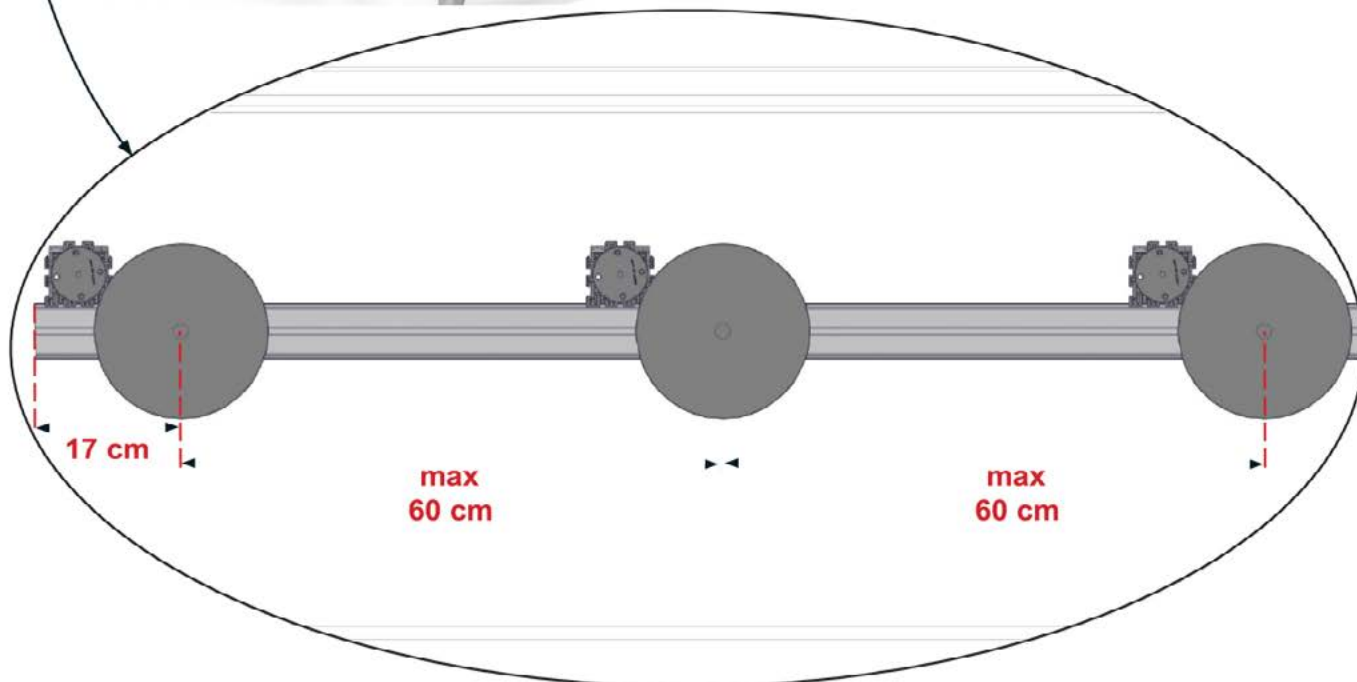
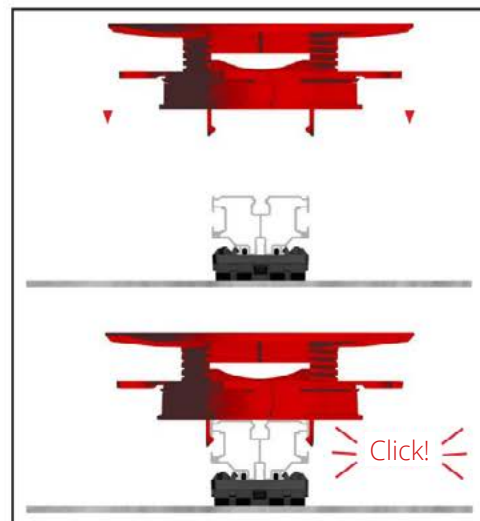


Assembly

4. | POSITION OUTSIDE RAILS


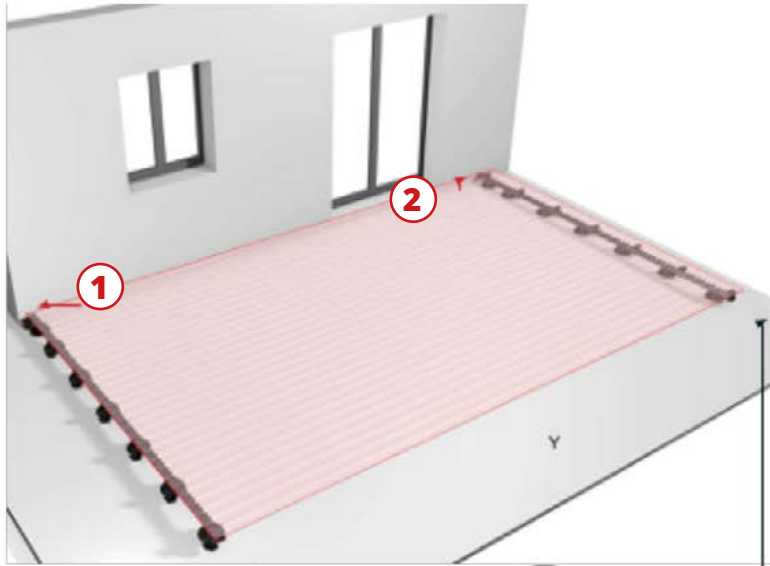


A: Without finishing planks

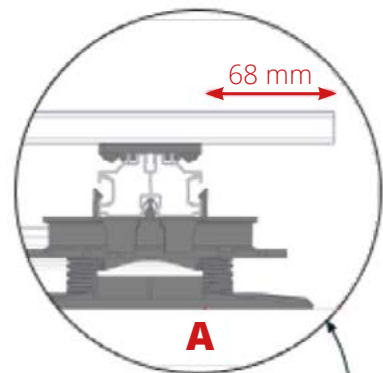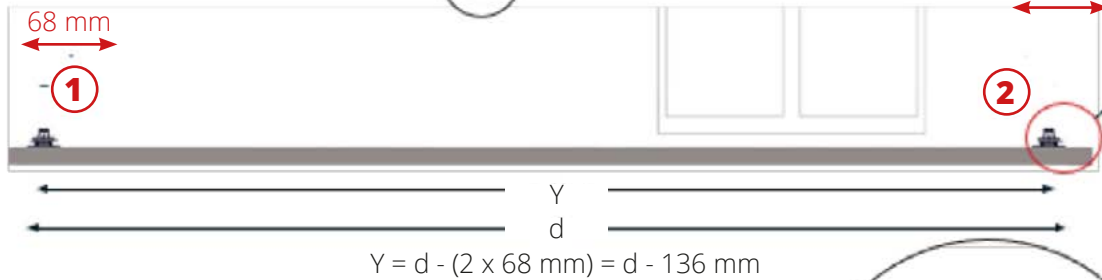


A

B: With finishing planks

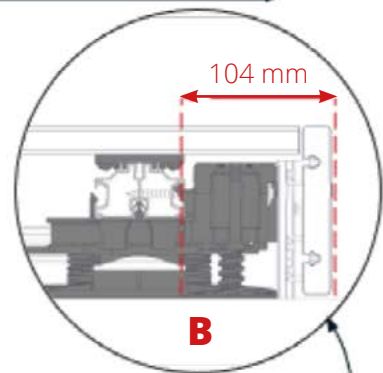
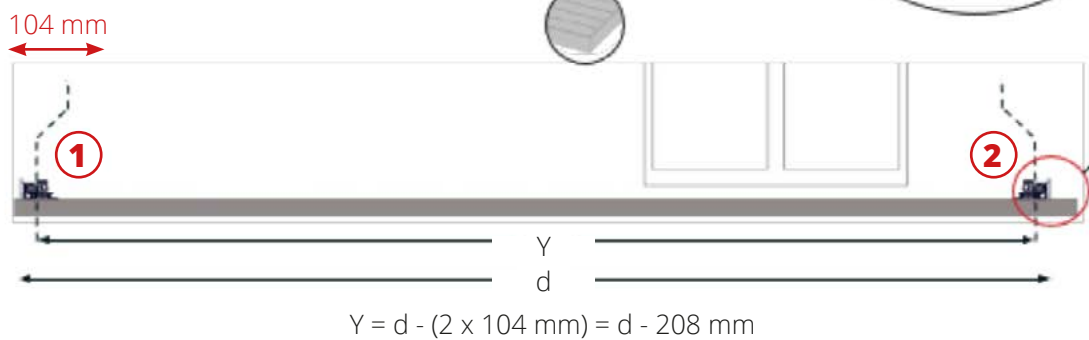


B

5. | ALIGN JOISTS



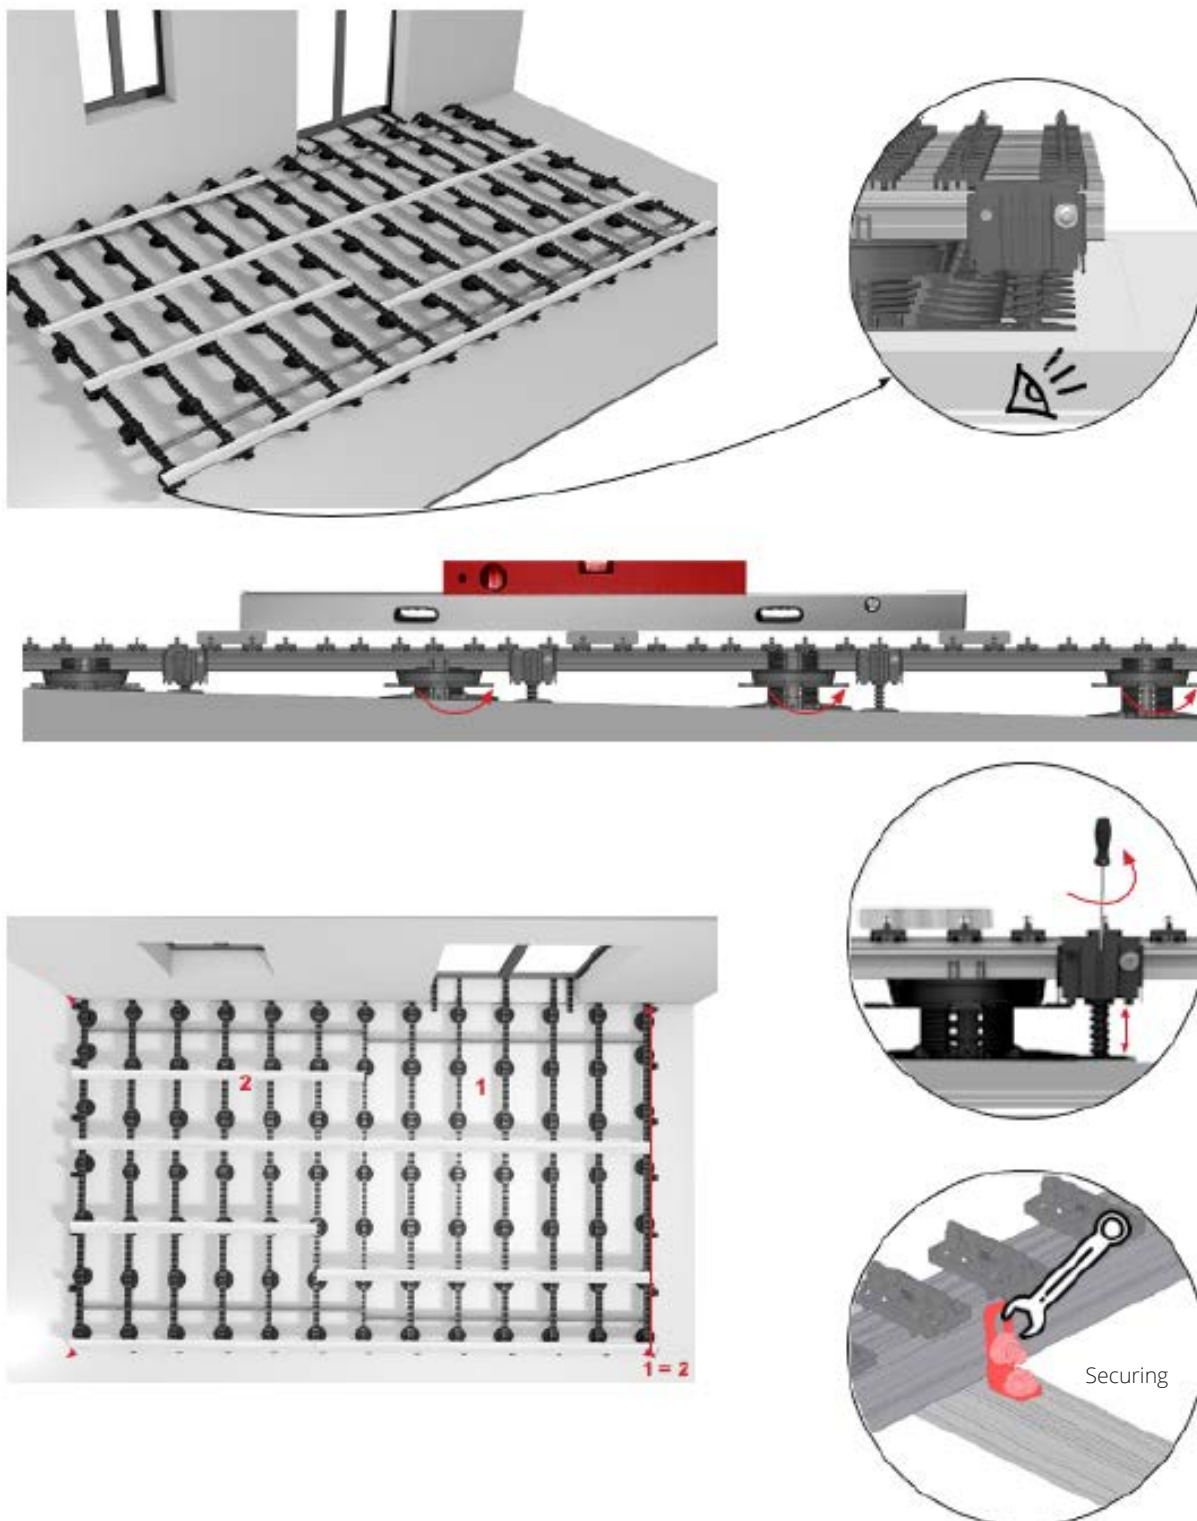


6. | INSTALL THE DECKING BOARDS

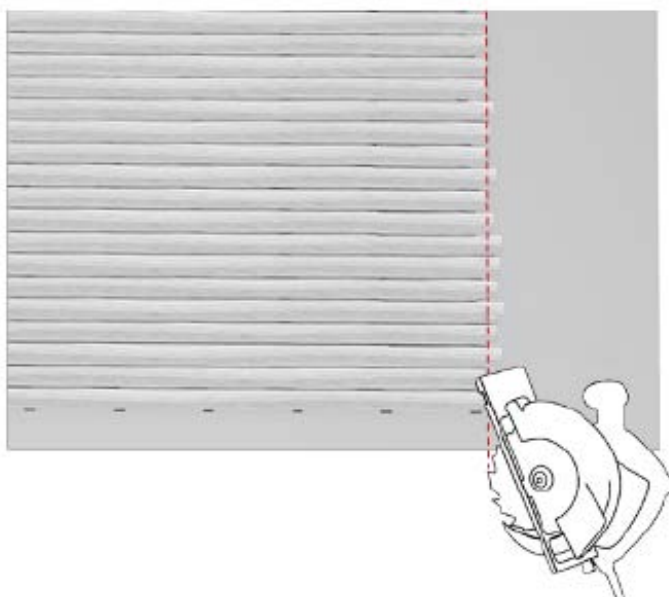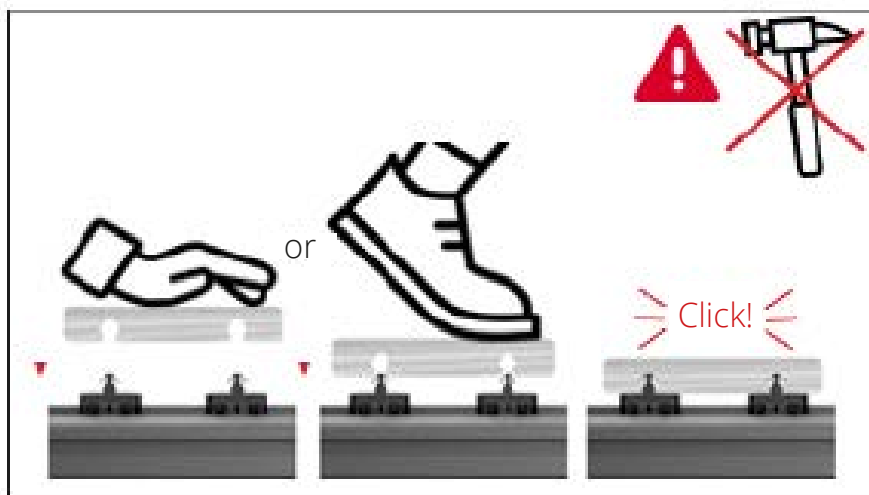

7. | SECURE THE FINISHING PLANKS

ASSEMBLY

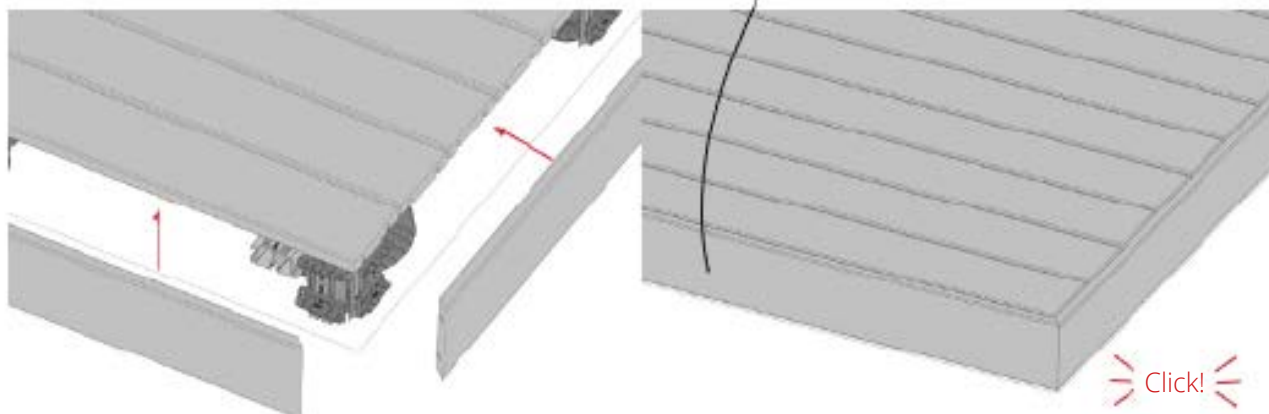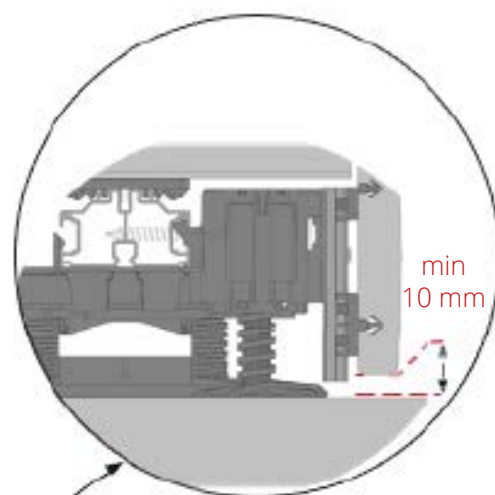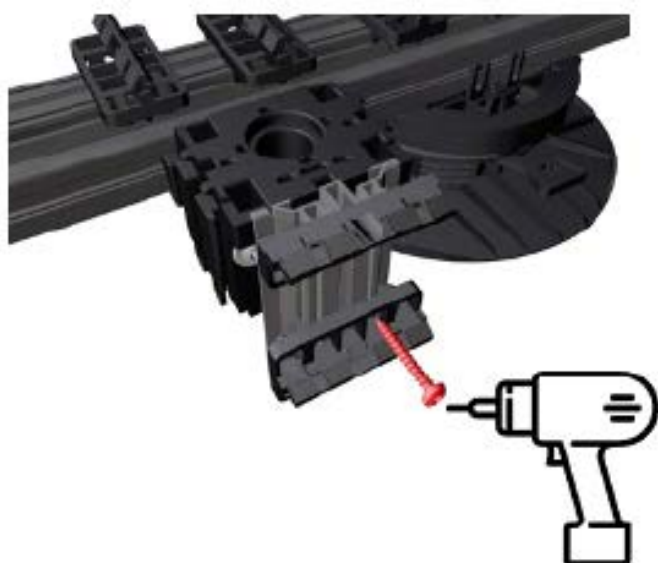

Carpentier Hardwood Solutions
Abeeldreef 15 | 8760 Meulebeke - Belgium
Phone +32 (0)51 48 89 61

www.carpentier.be



CLICK ON THE BUTTON ABOVE
TO VIEW OUR VIDEO TUTORIALS!

carpentier
SMART WOOD FOR NICE PLACES