




- * Étape 1 : Sur un côté, placez les rails en aluminium pour qu'ils dépassent de 18 mm maximum du coin de la façade. Veillez à ce que le premier clip soit toujours placé de telle sorte que la première lame dépasse de l'extérieur de la façade de 8 mm.
- * Étape 2 : Installez les lames de bardage verticalement selon les consignes de pose générales.
- * Étape 3 : Retirez le premier clip des rails en aluminium à placer sur l'autre côté et remplacez-les par un demi-clip.
- * Étape 4 : Sciez les rails de telle sorte que le premier clip complet se trouve maintenant à 68 mm de l'angle.
- * Étape 5 : Placez les rails contre les lames déjà installées. Veillez à ce que les rails soient bien en quinconce.
- * Étape 6 : Continuez à installer les lames de bardage.

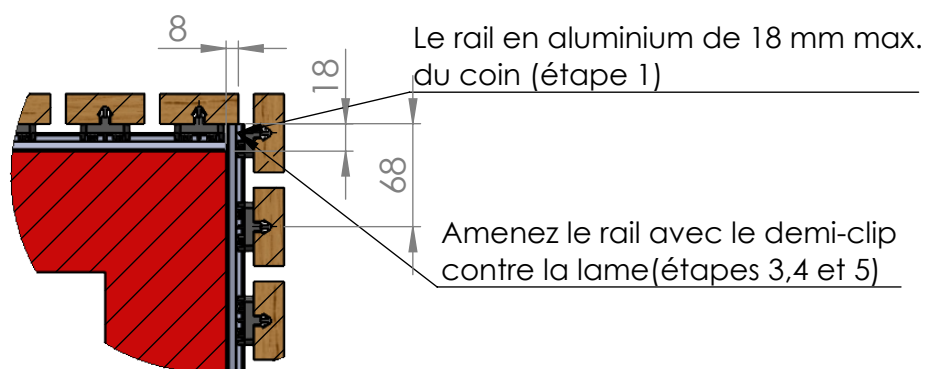

DETAIL A
échelle 1 : 5

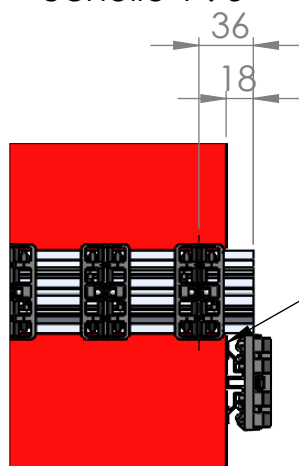

Profils en quinconce
(étape 5)

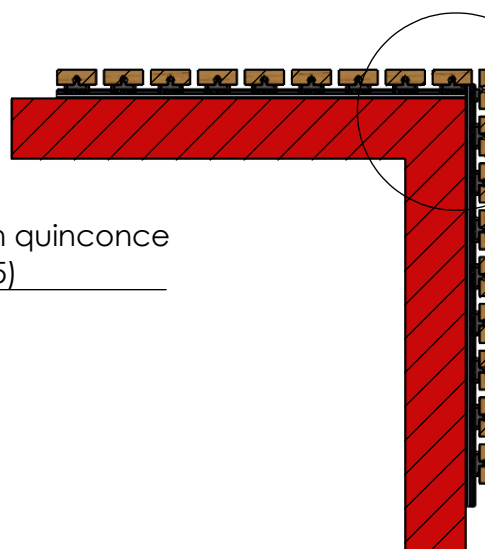

A

SV1QC

	Name	Date	©THIS DRAWING IS COPYRIGHTED. ALL RIGHTS ARE RESERVED. THIS DOCUMENT MAY NOT, IN WHOLE OR PART, BE COPIED, PHOTOCOPIED, TRANSLATED OR REDUCED TO ANY ELECTRONIC MEDIUM OR MACHINE-READABLE FORM WITHOUT PRIOR WRITTEN CONSENT FROM CARPENTIER HARDWOOD SOLUTIONS NV.		
Designer					
Draftsman	-				
Checked by	-	-	Part Number:	Material:	Treatment:
DEBURR & REMOVE SHARP EDGES UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE GIVEN IN MM GENERAL TOLERANCES ACCORDING TO ISO 2768-mK					
			Description:		
carpentier			Assemblage d'angle bardage en bois SV1QC		
SMART WOOD FOR NICE PLACES			échelle 1:10	Sheet: 2/4	Format: A4
			Revision:		