

1

2

3

4

A

- * Schritt 1: Platzieren Sie die Alu Rails an einer Wand bis maximal 38 mm über die Ecke der Fassade. Stellen Sie sicher, dass der erste Clip so positioniert ist, dass sich das erste Brett 2 mm innerhalb der Fassade befindet.
- * Schritt 2: Montieren Sie die Holzfassade vertikal gemäß unseren allgemeinen Montageanweisungen.
- * Schritt 3: Entfernen Sie den ersten Clip von den Alu Rails für die andere Wand und ersetzen Sie ihn durch einen halben Clip.
- * Schritt 4: Schneiden Sie die Rails so ab, dass der erste vollständige Clip sich auf 60 mm befindet.
- * Schritt 5: Platzieren Sie die Rails bis an die bereits montierten Bretter. Stellen Sie sicher, dass die Rails versetzt sind.
- * Schritt 6: Montieren Sie Ihre Holzfassade weiter.

A

B

B

C

C

D


D

E



E

F

F

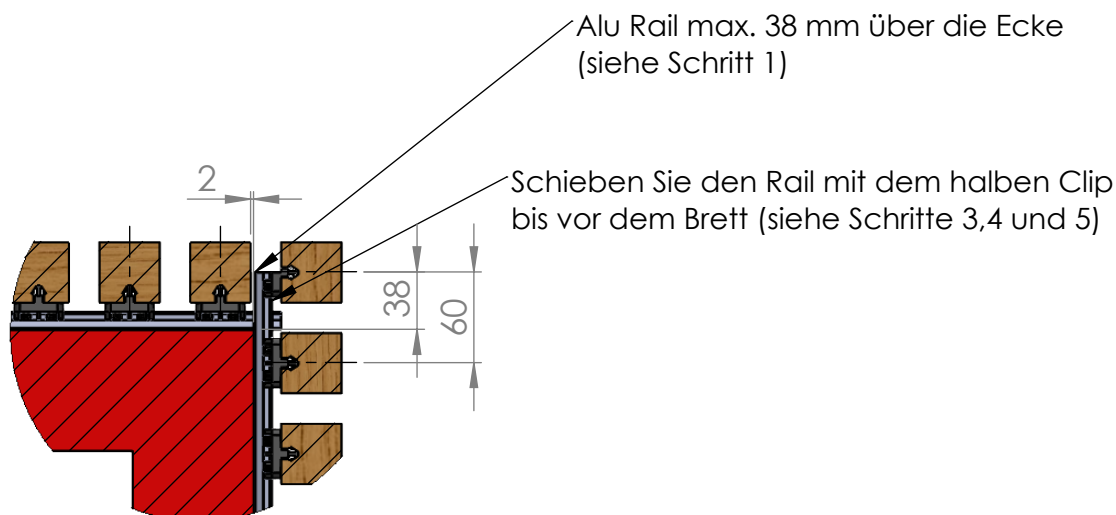

DETAIL A
Maßstab 1 : 5

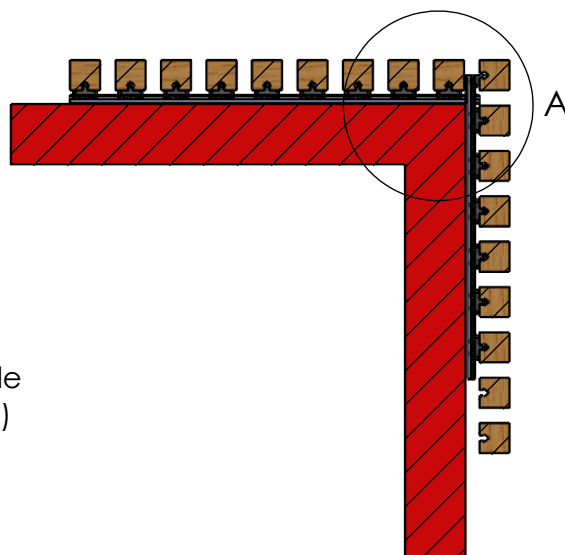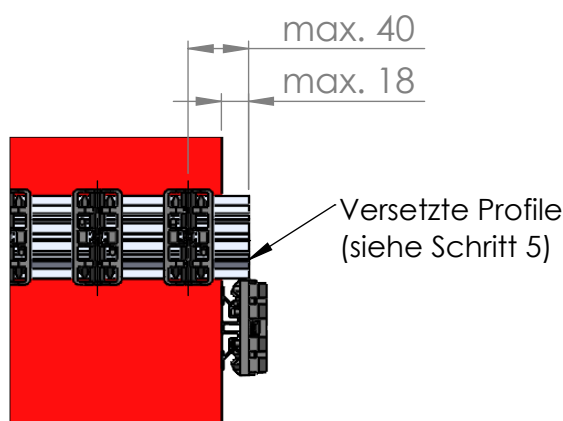

	Name	Date	©THIS DRAWING IS COPYRIGHTED. ALL RIGHTS ARE RESERVED. THIS DOCUMENT MAY NOT, IN WHOLE OR PART, BE COPIED, PHOTOCOPIED, TRANSLATED OR REDUCED TO ANY ELECTRONIC MEDIUM OR MACHINE-READABLE FORM WITHOUT PRIOR WRITTEN CONSENT FROM CARPENTIER HARDWOOD SOLUTIONS NV.		
Designer					
Draftsman	-				
Checked by	-	-	Part Number:	Material:	Treatment:
DEBURR & REMOVE SHARP EDGES UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE GIVEN IN MM GENERAL TOLERANCES ACCORDING TO ISO 2768-mK					-
Description:			Eckanschluss Holzfassade CUBUS		
carpentier SMART WOOD FOR NICE PLACES			Maßstab 1:10	Sheet: 4/4	Format: A4
				Revision:	

1

2

3

4