
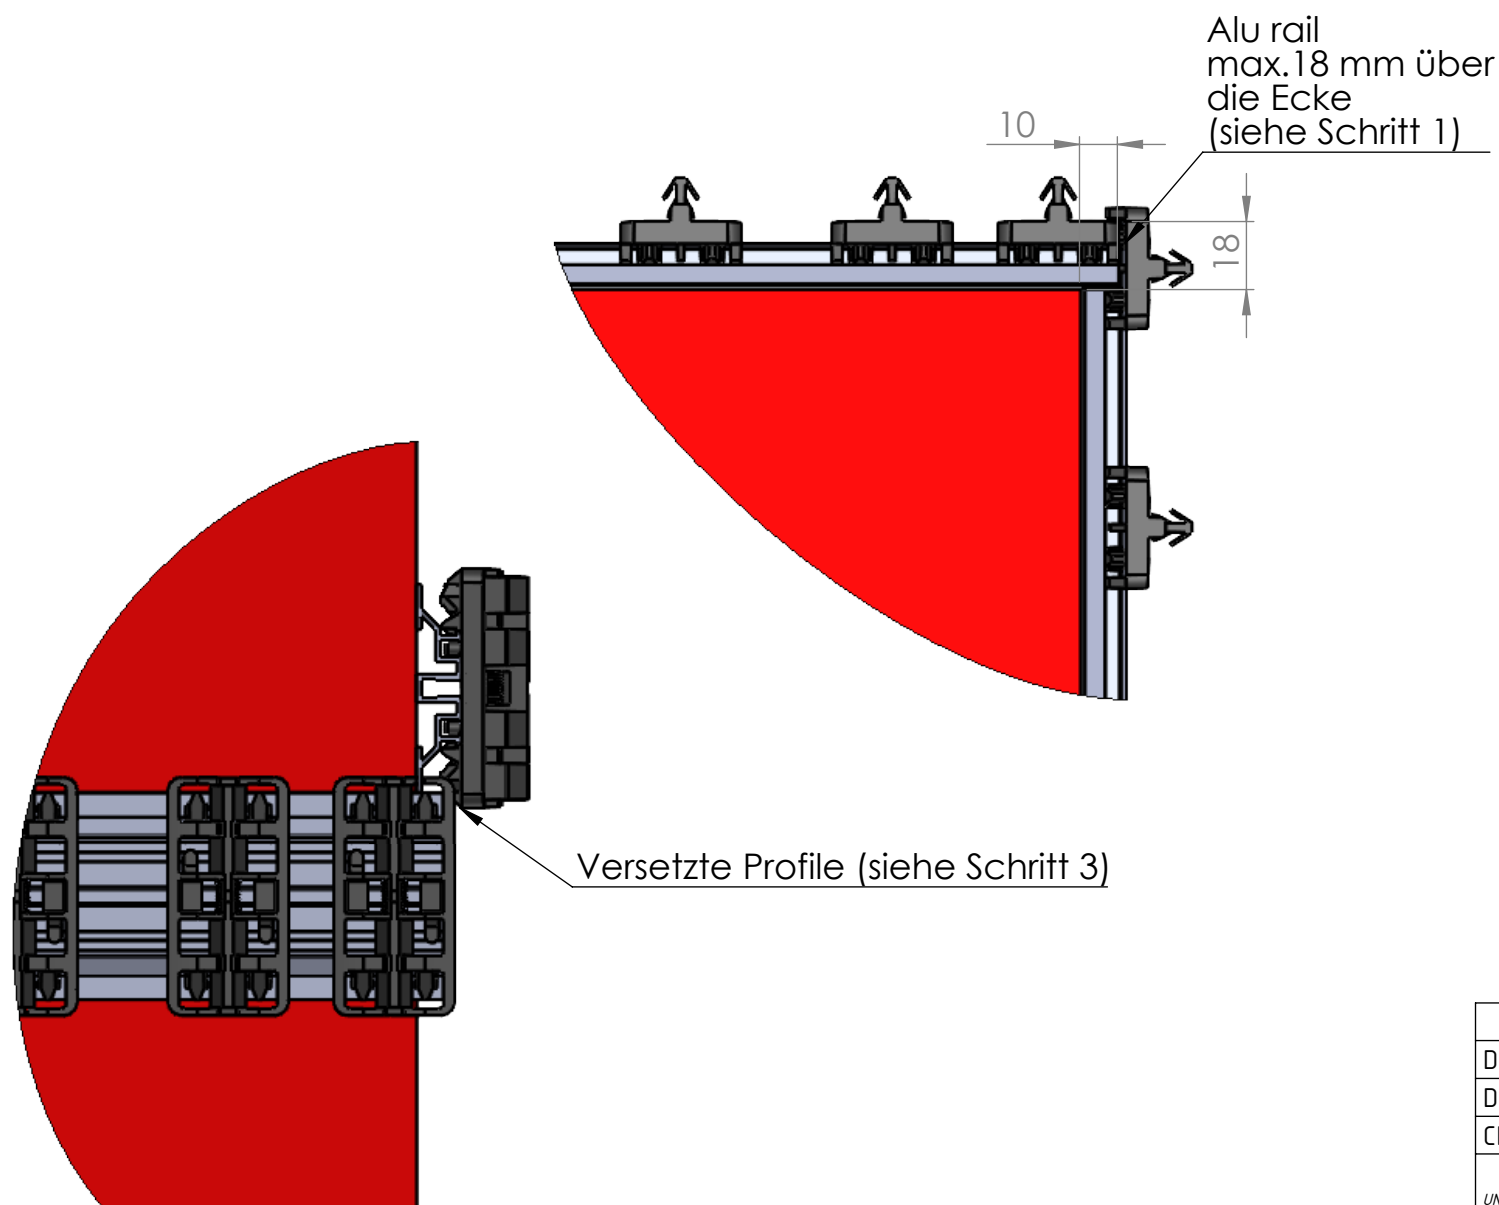


- * Schritt 1: Platzieren Sie die Alu Rails an einer Wand bis maximal 18 mm über die Ecke der Fassade. Stellen Sie sicher, dass die Reihenfolge der Clips/Bretter mit dem Muster übereinstimmt und beginnen Sie mit einem 65 mm-Brett.
- * Schritt 2: Montieren Sie die Holzfassade vertikal gemäß unseren allgemeinen Montageanweisungen.
- * Schritt 3: Platzieren Sie die Alu Rails an der anderen Wand. Stellen Sie sicher, dass die Rails versetzt sind.
- * Schritt 4: Befestigen Sie die Bretter auf den Rails. Es spielt keine Rolle, mit welchem Brett Sie anfangen, Sie müssen nur sicherstellen, dass zwischen dem letzten Brett der ersten Wand und dem ersten Brett der zweiten Wand ein Abstand von 4 mm vorhanden ist.
- * Schritt 5: Montieren Sie Ihre Holzfassade weiter.

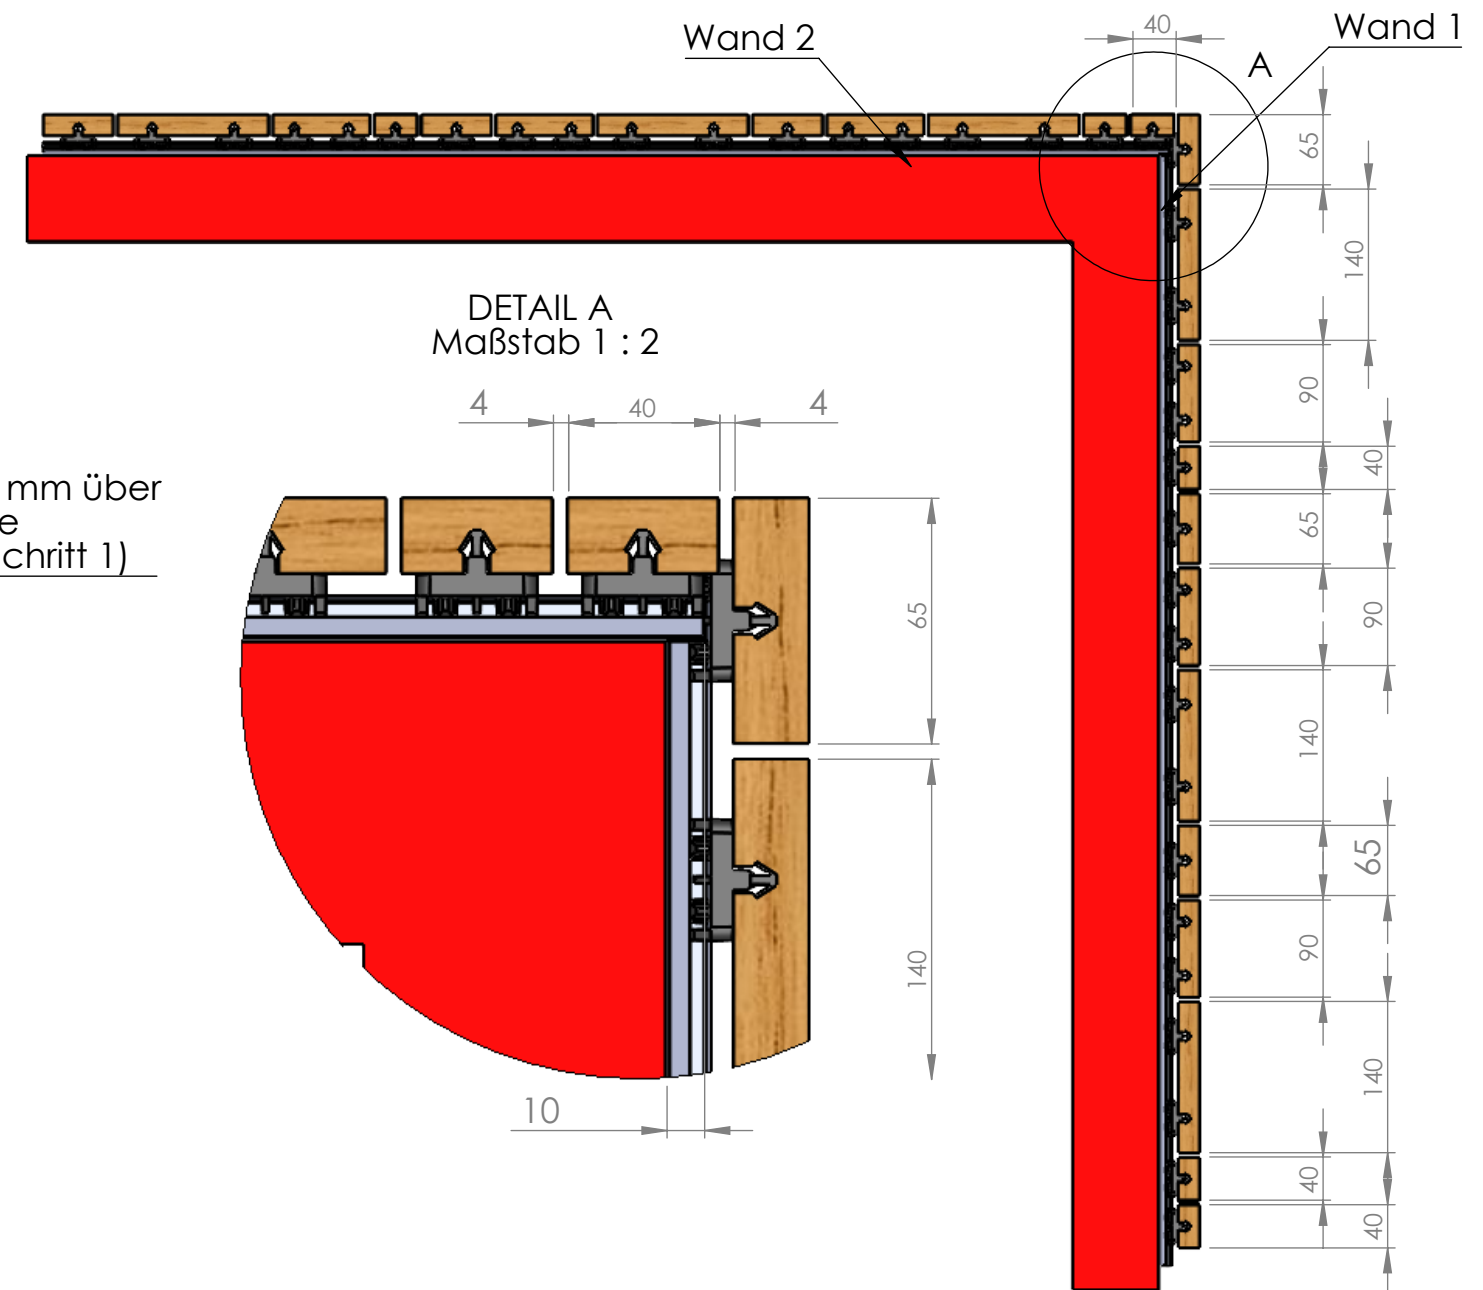

Name	Date	©THIS DRAWING IS COPYRIGHTED. ALL RIGHTS ARE RESERVED. THIS DOCUMENT MAY NOT, IN WHOLE OR PART, BE COPIED, PHOTOCOPIED, TRANSLATED OR REDUCED TO ANY ELECTRONIC MEDIUM OR MACHINE-READABLE FORM WITHOUT PRIOR WRITTEN CONSENT FROM CARPENTIER HARDWOOD SOLUTIONS.		
Designer				
Draftsman	-			
Checked by	-			
DEBURR & REMOVE SHARP EDGES. UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE GIVEN IN MM. GENERAL TOLERANCES ACCORDING TO ISO 2768-mK.		Part Number:	Material:	Treatment:
		Description:		
		Eckanschluss Holzfassade SV+		
		Maßstab: 1:10	Sheet: 3/4	Format: A3
		Revision:		