

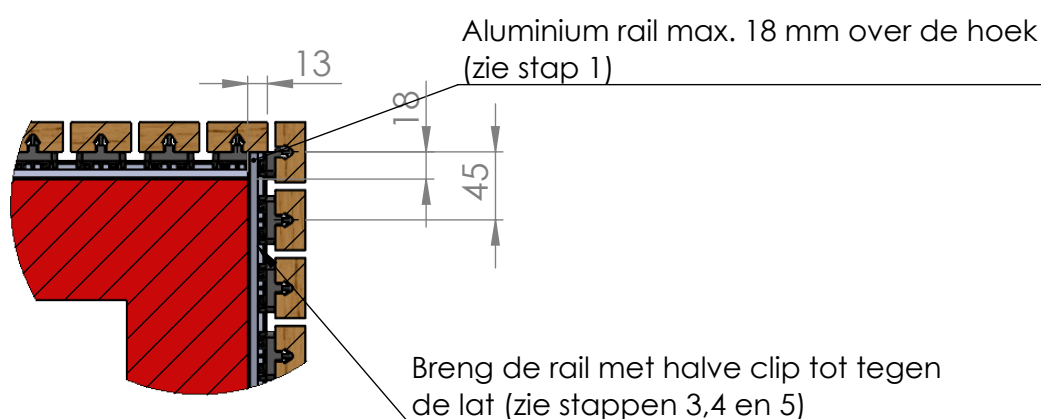


- * Stap 1: Plaats de aluminium rails op één zijde tot max. 18 mm over de hoek van de gevel. Zorg er telkens voor dat de eerste clip zo geplaatst is dat de eerste bekledingslat 13 mm buiten de gevel komt.
- * Stap 2: Plaats de gevelbekleding verticaal volgens onze algemene plaatsings-instructies.
- * Stap 3: Verwijder de eerste clip van de aluminium rails voor de andere wand en vervang deze door een halve clip.
- * Stap 4: Zaag de rails, zodat de eerste volledige clip zich nu op 45 mm bevindt.
- * Stap 5: Plaats de rails tot tegen de reeds gemonteerde planken. Let er op dat de rails geschrinkt staan.
- * Stap 6: Plaats verder uw gevelbekleding.

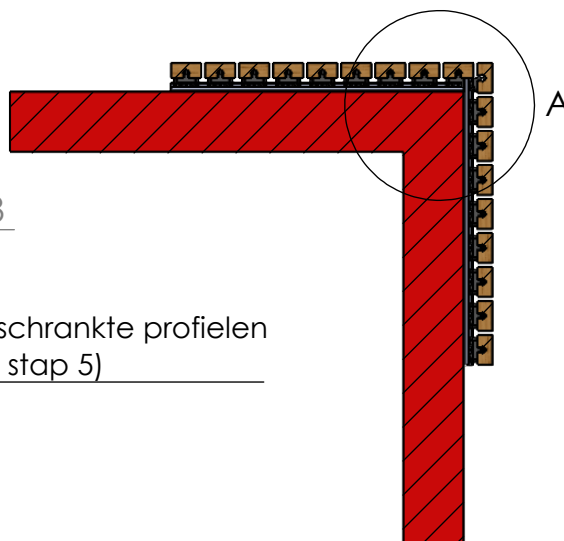

DETAIL A
schaal 1 : 5

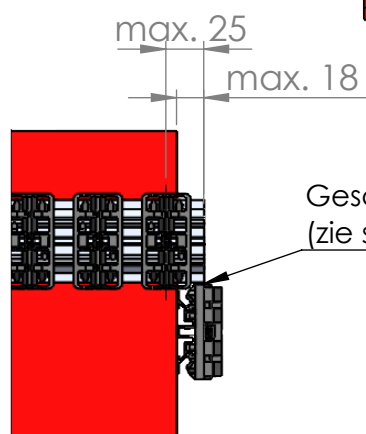

	Name	Date	©THIS DRAWING IS COPYRIGHTED. ALL RIGHTS ARE RESERVED. THIS DOCUMENT MAY NOT, IN WHOLE OR PART, BE COPIED, PHOTOCOPIED, TRANSLATED OR REDUCED TO ANY ELECTRONIC MEDIUM OR MACHINE-READABLE FORM WITHOUT PRIOR WRITTEN CONSENT FROM CARPENTIER HARDWOOD SOLUTIONS NV.		
Designer					
Draftsman	-				
Checked by	-	-	Part Number:	Material:	Treatment:
DEBURR & REMOVE SHARP EDGES UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE GIVEN IN MM GENERAL TOLERANCES ACCORDING TO ISO 2768-mK					-
Description:			Gevelbekleding SV3QC hoekafwerking		
carpentier SMART WOOD FOR NICE PLACES			Schaal 1:10	Sheet: 1/4	Format: A4
				Revision:	