
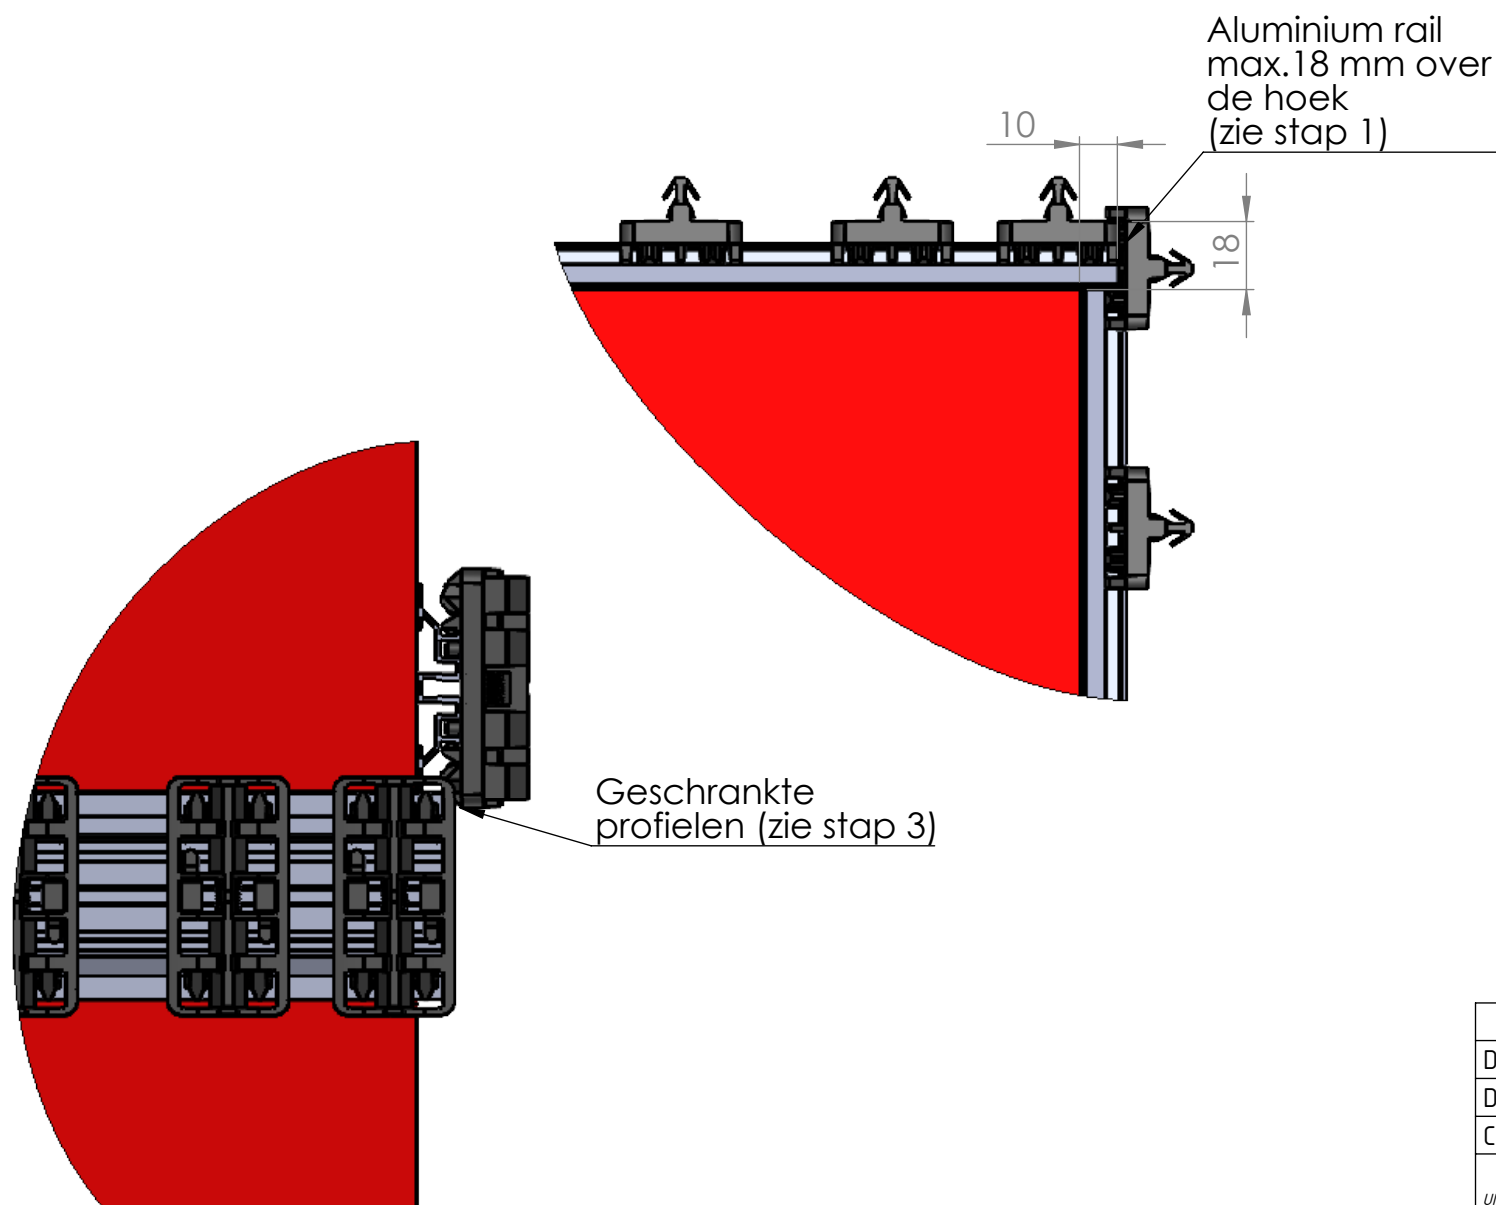


- * Stap 1: Plaats de aluminium rails op één zijde tot max. 18 mm over de hoek van de gevel. Zorg ervoor dat de volgorde van de clips/latten overeenkomt met het patroon en begin met een lat van 65 mm.
- *Stap 2: Plaats de gevelbekleding verticaal volgens onze algemene plaatsingsinstructies.
- *Stap 3: Plaats de aluminium rails op de andere zijde. Let erop dat de rails geschrinkt zijn.
- *Stap 4: Bevestig de latten op de rails. Het maakt niet uit met welke lat u begint, u hoeft er enkel voor te zorgen dat er een ruimte van 4 mm is tussen de laatste lat van de eerste zijde en de eerste lat van de tweede zijde.
- *Stap 5: Plaats verder uw gevelbekleding.

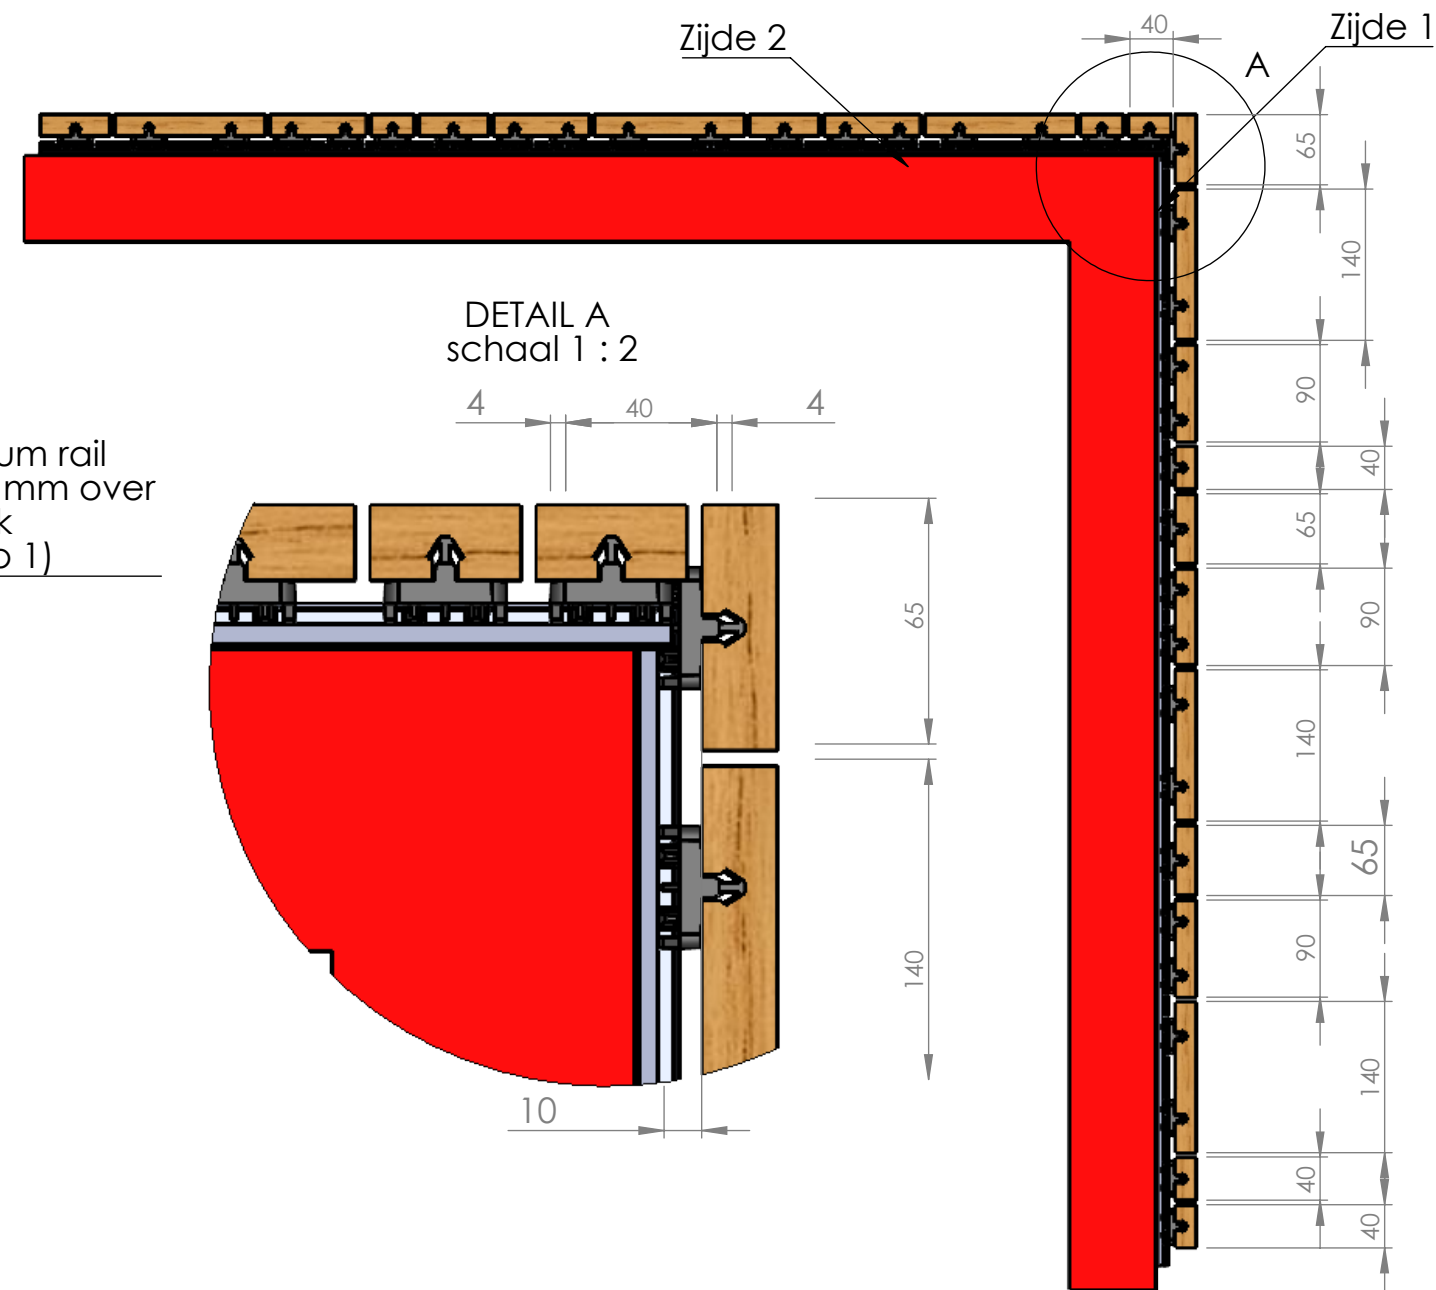

	Name	Date	©THIS DRAWING IS COPYRIGHTED. ALL RIGHTS ARE RESERVED. THIS DOCUMENT MAY NOT, IN WHOLE OR PART, BE COPIED, PHOTOCOPIED, TRANSLATED OR REDUCED TO ANY ELECTRONIC MEDIUM OR MACHINE-READABLE FORM WITHOUT PRIOR WRITTEN CONSENT FROM CARPENTIER HARDWOOD SOLUTIONS.		
Designer					
Draftsman	-				
Checked by	-	-	Part Number:	Material:	Treatment:
DEBURR & REMOVE SHARP EDGES. UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE GIVEN IN MM. GENERAL TOLERANCES ACCORDING TO ISO 2768-mK.			Description:		
carpentier SMART WOOD FOR NICE PLACES			Hoekverbinding SV+		
			Schaal: 1:10	Sheet: 2/4	Format: A3
			Revision:		