



- * Step 1: Install aluminium joists along one wall, extending no more than 38mm past the corner on each joist, position the first clip in such a way that the edge of the first cladding board intrudes 2mm before the corner.
- * Step 2: Install vertical cladding boards according to our general installation instructions.
- * Step 3: For the next wall, remove first clip from each joist and replace with half clip.
- * Step 4: Shorten joist to ensure that the first whole clip is positioned at 60mm.
- * Step 5: Install joists until they meet the boards that have already been installed.
Ensure the joints are staggered.
- * Step 6: Install the rest of the cladding.

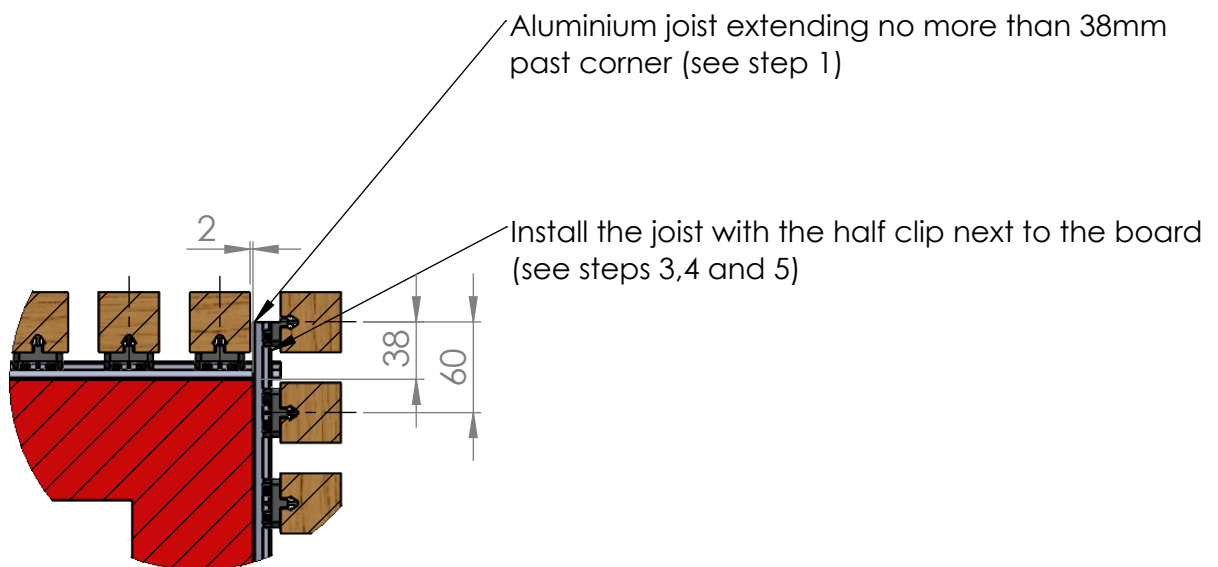

DETAIL A
scale 1 : 5

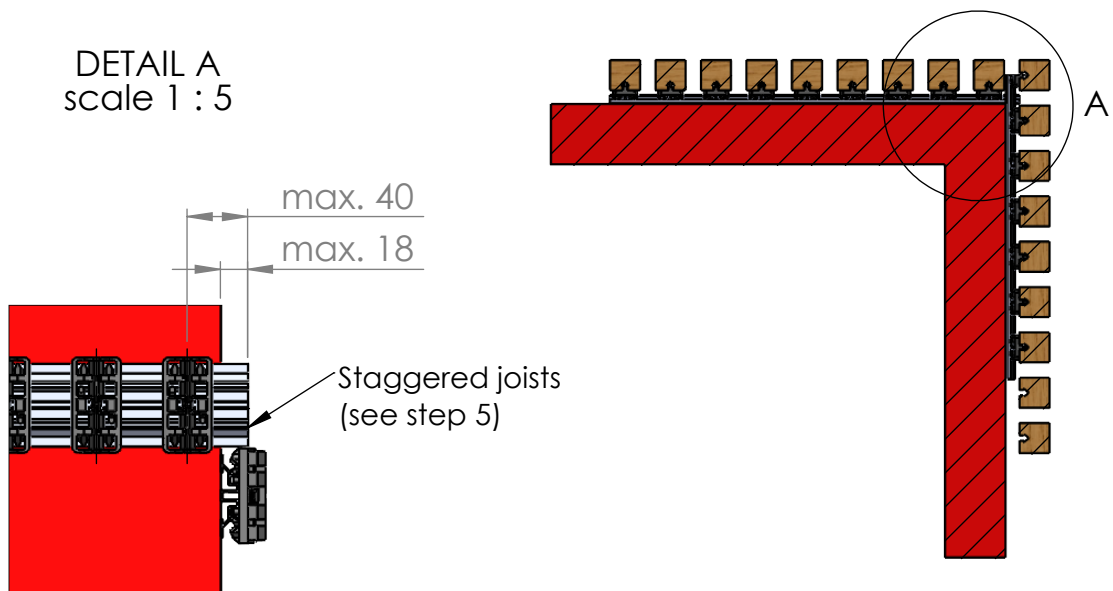

	Name	Date	©THIS DRAWING IS COPYRIGHTED. ALL RIGHTS ARE RESERVED. THIS DOCUMENT MAY NOT, IN WHOLE OR PART, BE COPIED, PHOTOCOPIED, TRANSLATED OR REDUCED TO ANY ELECTRONIC MEDIUM OR MACHINE-READABLE FORM WITHOUT PRIOR WRITTEN CONSENT FROM CARPENTIER HARDWOOD SOLUTIONS NV.		
Designer					
Draftsman	-				
Checked by	-	-	Part Number:	Material:	Treatment:
DEBURR & REMOVE SHARP EDGES UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE GIVEN IN MM GENERAL TOLERANCES ACCORDING TO ISO 2768-mK					-
Description:			Installing cladding around corners CUBUS		
carpentier SMART WOOD FOR NICE PLACES			Scale 1:10	Sheet 3/4	Format A4
				Revision:	