

STEP BY STEP INSTRUCTIONS FOR INSTALLING YOUR WOODEN FENCING

COMPONENTS



Stainless steel base plate



Aluminium posts



Fixation brackets
(horizontal cladding only)



Horizontal/vertical aluminium joist with with
pre-mounted clips
For horizontal cladding: additional horizontal
aluminium joists with clips at 60cm spacing



Post cap



Joint piece
(vertical cladding only)



U profile
(vertical cladding only)



INSTALLATION

1. | Post spacing

- A.** | Space posts 1.8m apart (centre to centre).

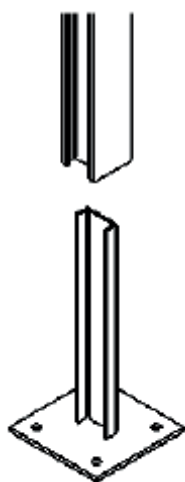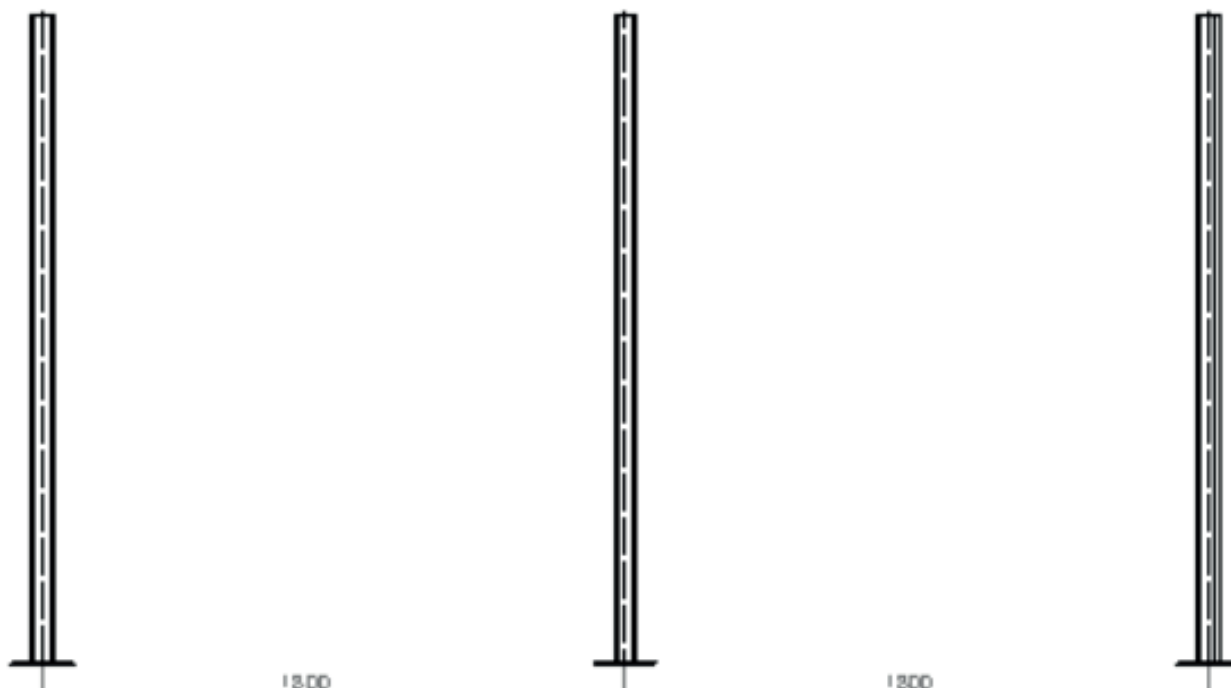

- B.** | Slide post over base plate and secure with self-tapping screws.


- C.** | Place caps on top of posts to prevent water seepage.

Vertical cladding: proceed to [page 3](#)


Horizontal cladding: proceed to [page 4](#)

VERTICAL CLADDING

2. Attach horizontal joists (with pre-mounted clips) to posts. Spacing should be no more than 60cm.

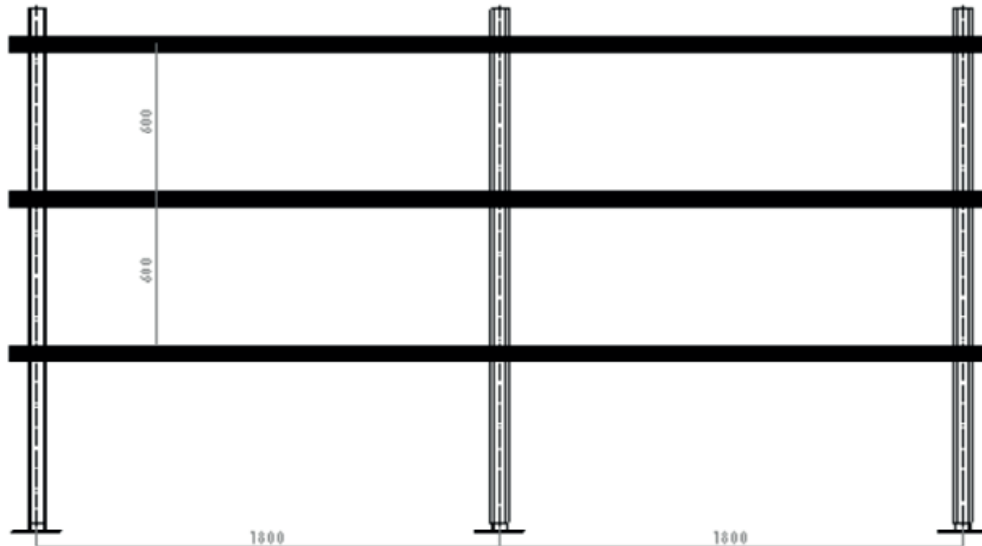

3. For longer lengths, install multiple joists in a row, connecting with joining pieces.

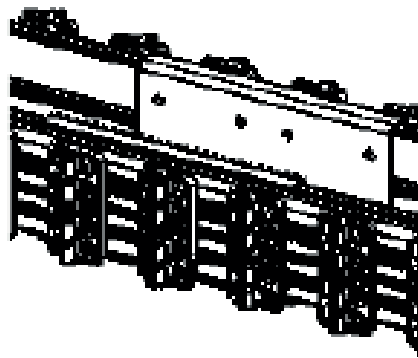


4. On the top row of joists, apply a small patch of silicone to each clip to prevent cladding boards from sagging over time.
5. Click cladding onto clips.
6. Place U profile on top edge to finish.

BIJ HORIZONTALE BEKLEDING

- 2.** Use M8 bolts to attach installation profiles to posts.

Ensure correct spacing:

- Holes facing posts: 30mm
- Upward facing holes: 50mm

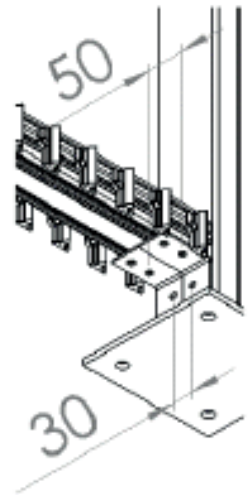


- 3.** Attach the horizontal joists (with clips) to fixation brackets at 60cm intervals. Place an extra clip at the end.

- 4.** Attach the vertical aluminium joists to the horizontal joists at 60cm intervals with clips facing outwards.



- 5.** Click cladding onto clips.

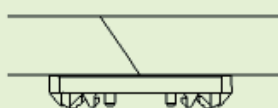

Where two cladding boards meet, saw the meeting points off at an angle and click both together onto a single clip. The clip does not need to attach to a profile.

For most aesthetic results, ensure that joins are staggered.